


Apply a smooth concrete to the small mesh form by pushing it well into the wire to completely cover and surround it (1). The foam core stops the mix from being pushed to the other side. On the blade part you must use your own fingers to stop the mix from being pushed through.

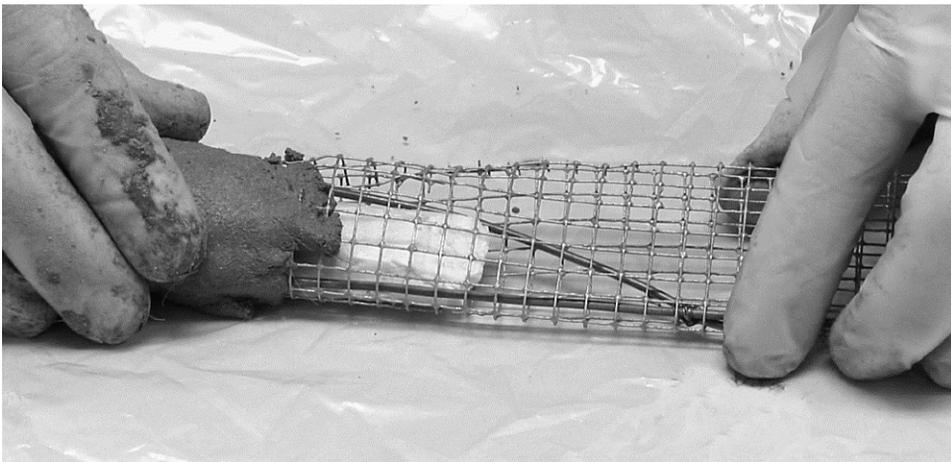

More detail (2) showing the mesh, the steel rod, foam, and the concrete pushed into place. Try and cover all the wire in this first step.